




PTFE seats

Fig. 560

P-T chart and torque values in Nm

P Bar

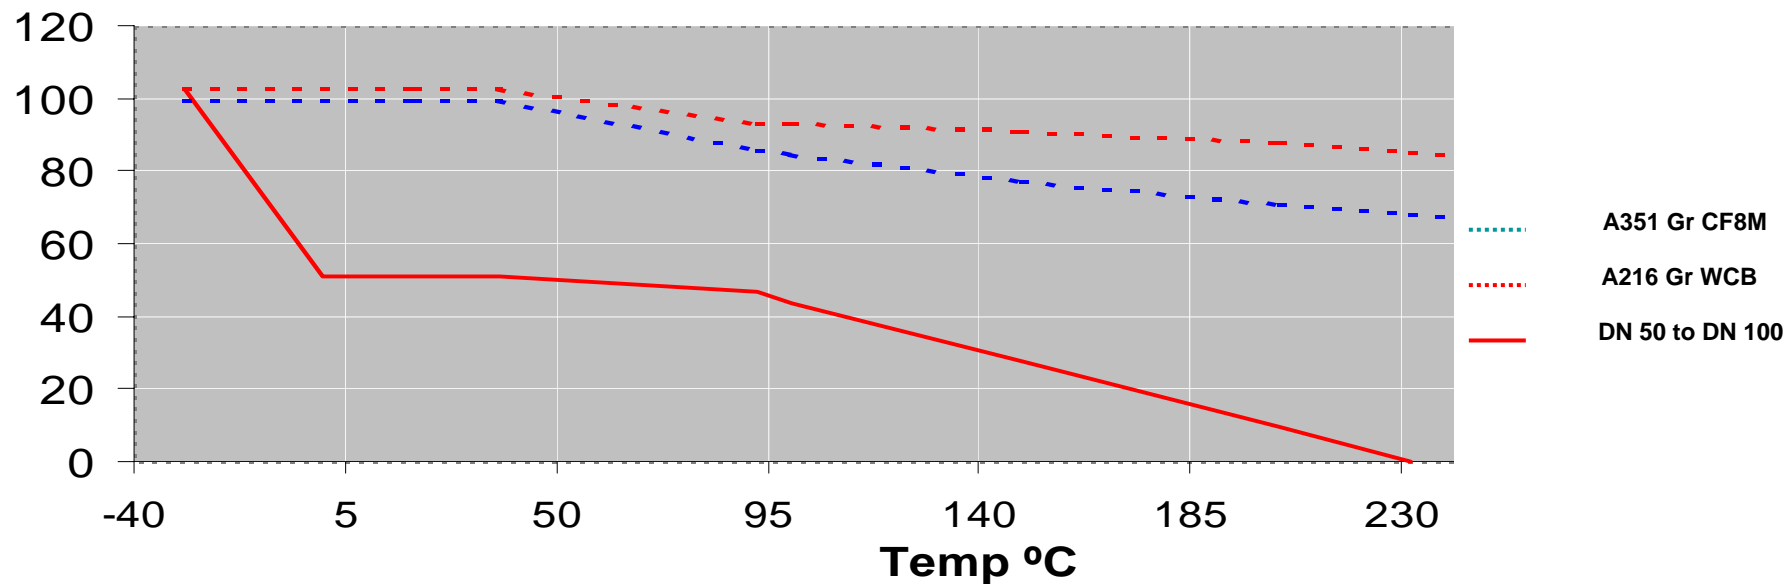


VALVE	AT DIFFERENTIAL Class 600 (100bar)	
	Fig. 560	Fig. 660
DN 2"	165	130
DN 3"	260	220
DN 4"	700	280



Glass Filled PTFE seats

Fig. 560

P-T chart and torque values in Nm

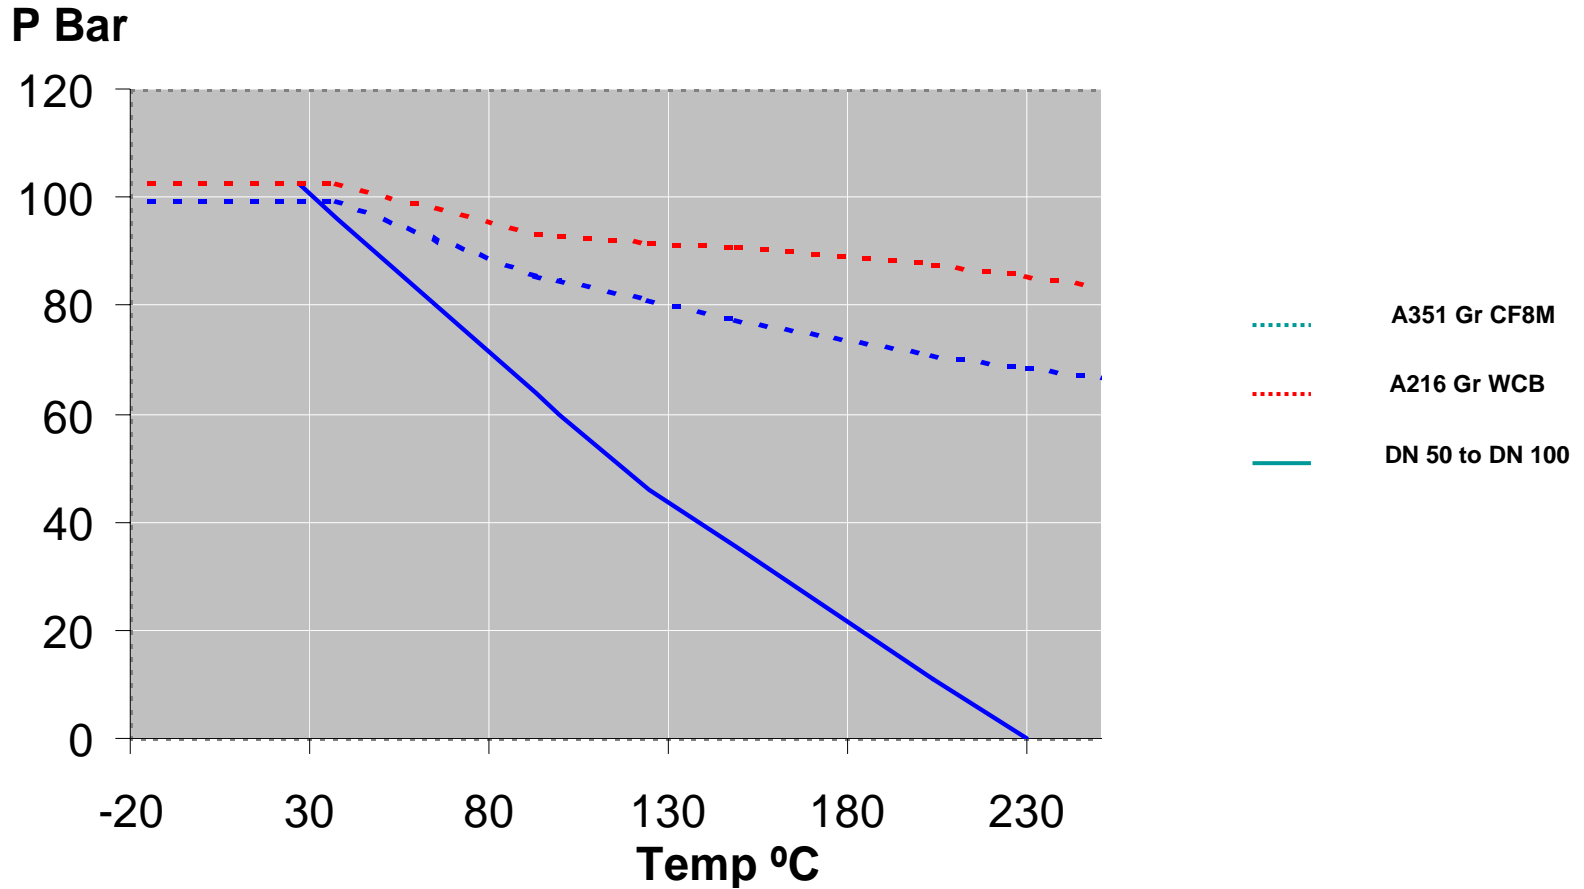

VALVE	AT DIFFERENTIAL Class 600 (100bar)	
	Fig. 560	Fig. 660
DN 2"	190	149,5
DN 3"	300	253
DN 4"	800	322




Carbon-Graphite Filled PTFE seats

Fig. 560

P-T chart and torque values in Nm

P Bar

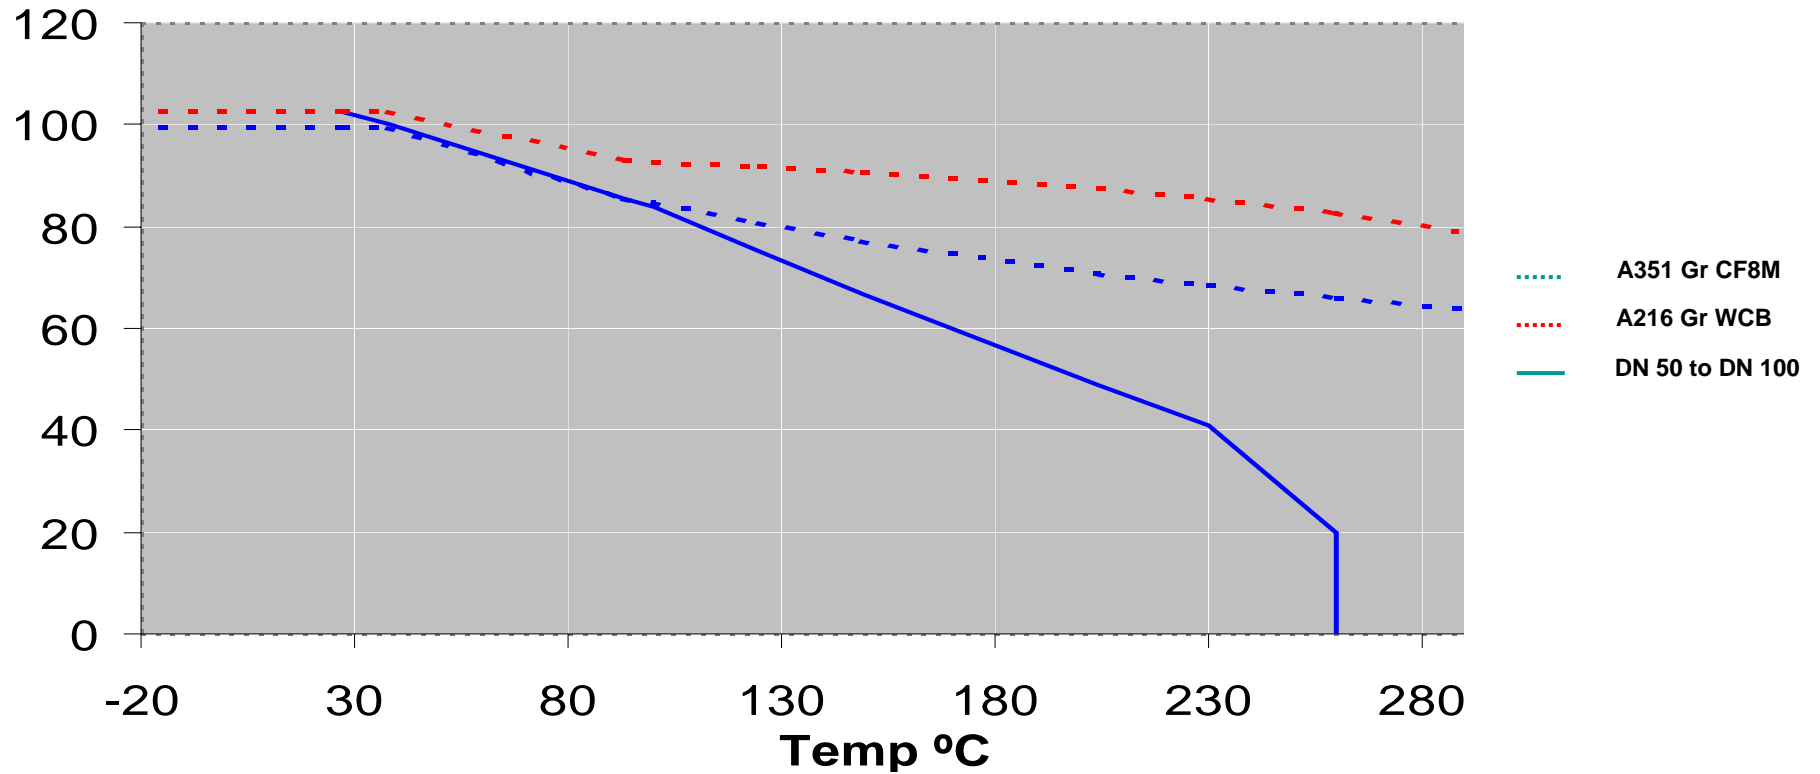


VALVE	AT DIFFERENTIAL Class 600 (100bar)	
	Fig. 560	Fig. 660
DN 2"	200	156
DN 3"	310	264
DN 4"	840	336



“STANSIT” Stainless Steel Filled PTFE seats Fig. 560

P-T chart and torque values in Nm

P Bar

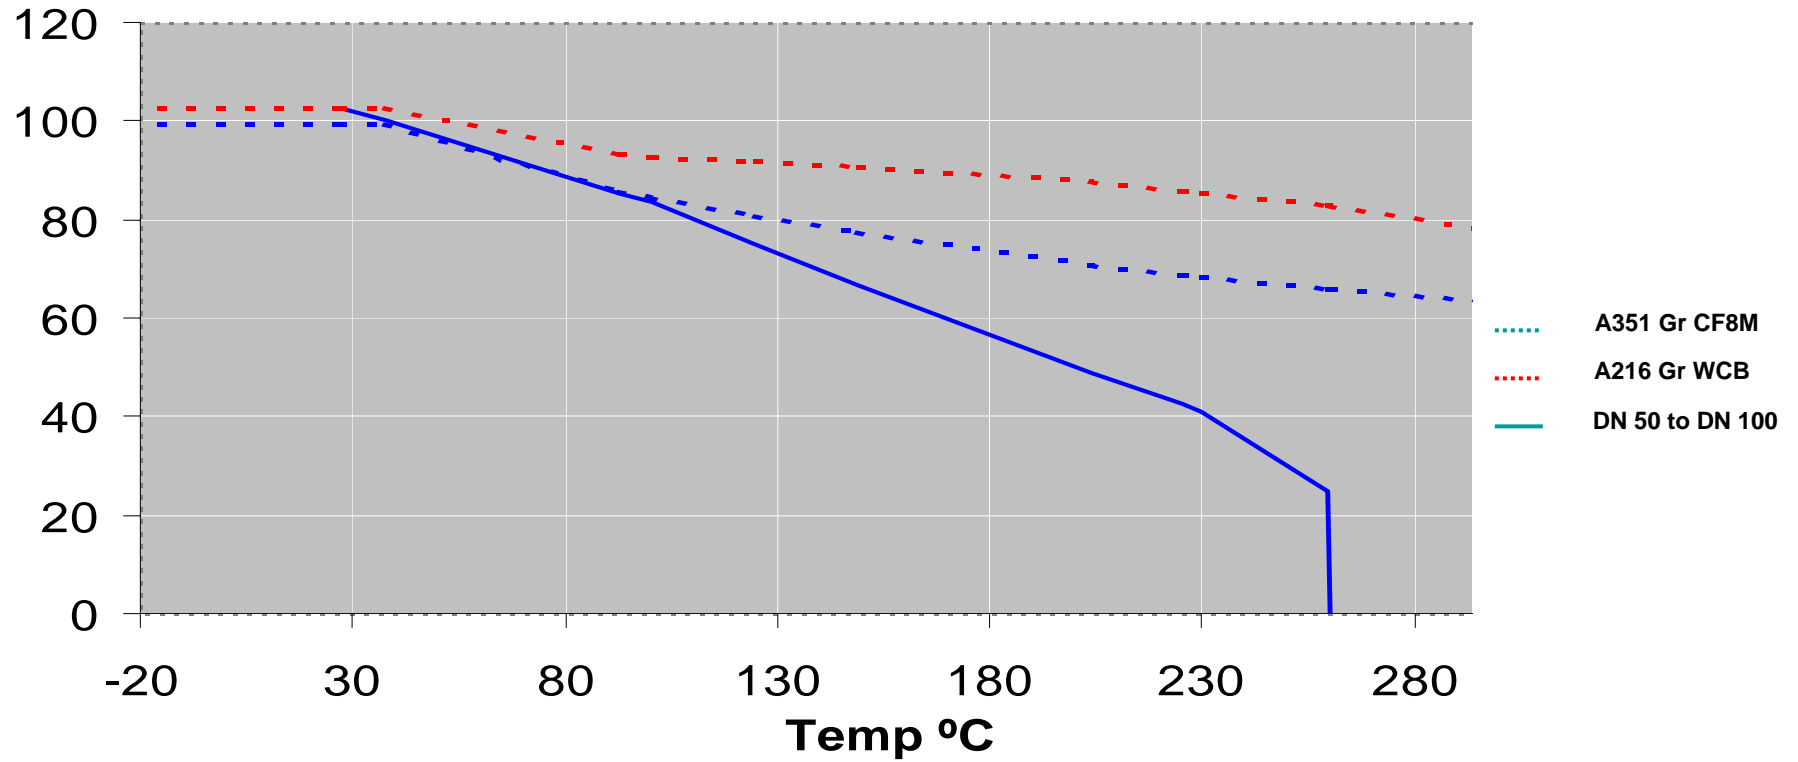


VALVE	AT DIFFERENTIAL Class 600 (100bar)	
	Fig. 560	Fig. 660
DN 2"	200	156
DN 3"	310	264
DN 4"	840	336



DEVLON™ seats

Fig. 560

P-T chart and torque values in Nm

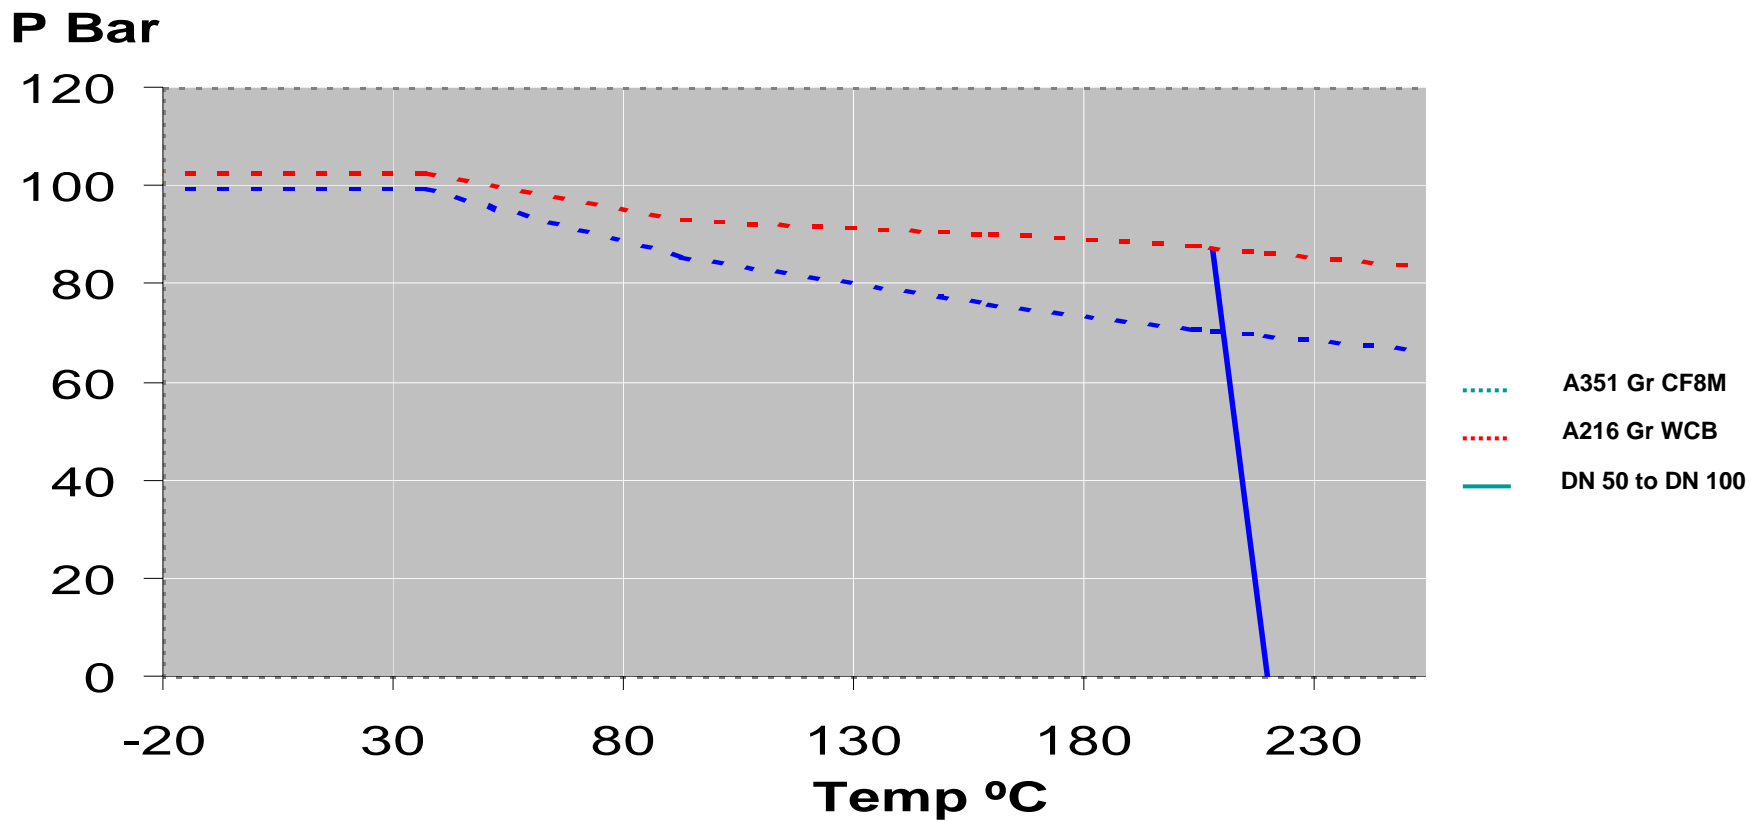

VALVE	AT DIFFERENTIAL Class 600 (100bar)	
	Fig. 560	Fig. 660
DN 2"	140	90
DN 3"	260	140
DN 4"	480	260